


HEAVY DUTY MUDGUARDS

FOR Y LARGE

PART NUMBER: 400953

carry
freedom.

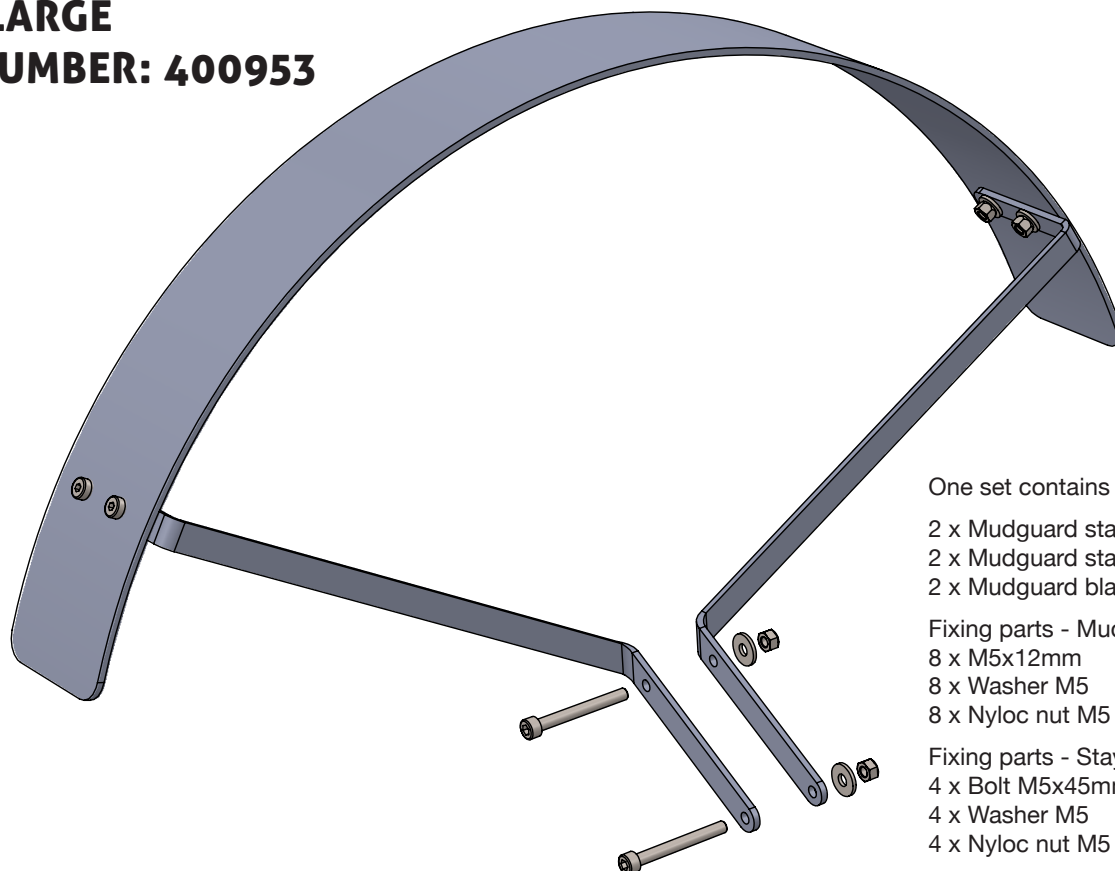

One set contains the following parts:

2 x Mudguard stay right
2 x Mudguard stay left
2 x Mudguard blade

Fixing parts - Mudguard Blade to Stay:

8 x M5x12mm
8 x Washer M5
8 x Nyloc nut M5

Fixing parts - Stay to Frame:

4 x Bolt M5x45mm
4 x Washer M5
4 x Nyloc nut M5

These mudguards protect luggage from road spray - only for Y large 20" wheels.

Mudguards 65mm wide, 2mm thick aluminium with tread plate pattern. Stays are 3mm thick stainless steel. All fittings are stainless steel.

HOW TO FIT THE MUDGUARDS

1) Remove the trailer wheel and lightly tighten the mudguards in place so they can still move.

2) Re-fit the wheel.


3) Adjust their position so that the wheel is centered on the mudguard, and so that left and right are in equal position.

4) Tighten the mudguards in their final position, make sure the top and bottom bolt are evenly tightened by the same amount.



ANY PROBLEMS?

Email us at info@carryfreedom.com or give us a call on +49 5431-908 9980

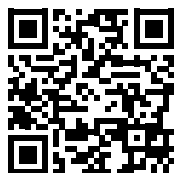

ALSO AVAILABLE:

Spare hitches, pins and bike brackets; Longer axle beams to widen the Y-Frame; Hand cart handles so you can use your Y-Frame without the bike attached; Y-Surf attachment for surfboards, paddle boards and anything long; Super tough, waterproof bags, specially made for use with Y-Frames, small or large. And lots more!

See www.CarryFreedom.com for more details.