

HAND CART HANDLE

FOR Y SMALL AND LARGE

PART NUMBER: 401123

carry
freedom.

The Hand Cart handle makes it easier to walk with a Y-Frame trailer. It also provides a support leg to keep the trailer level when it is not attached to the bicycle.

The handle does not need to be removed when the Y-Frame is being used as a bicycle trailer, and the trailers towing arm does not need to be removed when the Y-Frame is being walked.

Two Hand Cart Handles can be combined to create a dedicated hand cart or trekking cart for more specialist applications.

ATTACHING - The Hand Cart Handle is connected almost always to the right hand arm of the Y-Frame.

Slide the hand cart handle sleeve into the Y of the trailer frame and pin it in place. Make sure to close the spring gate on the safety pin to stop it shaking loose. This is the same procedure as for attaching the trailers towing arm. If you have a trailer from 2017 onwards, you can also use the clamp facility on the frame, but **NEVER** use the hand cart handle without the safety pin.

You can attach the handle to the left side of the trailer, or replace the safety pin with a M6 bolt for increased security.

ADJUSTING - The height and angle of the walking handle can be adjusted using the QR lever. Simply loosen the lever, adjust the required height and re-tighten the lever. No tools are necessary for this adjustment. Make sure there is sufficient clearance between the bottom of the handle and the ground before cycling.

DUAL PURPOSE - When only one hand cart handle is fitted the Y can either be used as a bicycle trailer or a walking cart.

It is easiest to walk the trailer with the handle in your right hand, so the wheels are at the front and you are on the side of the trailer. This prevents your feet hitting the trailer, and allows you to watch the load.

When the trailer is at rest and not attached to the bicycle it will stand on the lower leg.

The handle can be left in place when the Y-Frame is being used as a bicycle trailer, and the towing arm can be left in place when the Y-Frame is being used as a walking cart.

AS A WALKING CART - The trailers towing arm can be removed and replaced with a 2nd hand cart handle. This allows the Y to operate as a dedicated walking cart,

making it easier to walk and more stable when it is standing. This makes it ideal for use as a vending or market cart.


AS A TREKKING CART - The handles can be reversed so the trailer can function as a trekking cart. This layout increases heel clearance and makes the trailer suitable for walking or running long distances.

The hand grips will need to be swapped from short leg of the walking handle to the long leg.

Again the lower part of the handles are used as legs to support the trailer when it is not being used.

ALSO AVAILABLE - Spare hitches, pins and bike brackets; Longer axle beams to widen the Y-Frame; Hand cart handles so you can use your Y-Frame without the bike attached; Y-Surf attachment for surfboards, paddle boards and anything long; Super tough, waterproof bags, specially made for use with Y-Frames, small or large. And lots more!

See www.CarryFreedom.com for more details.

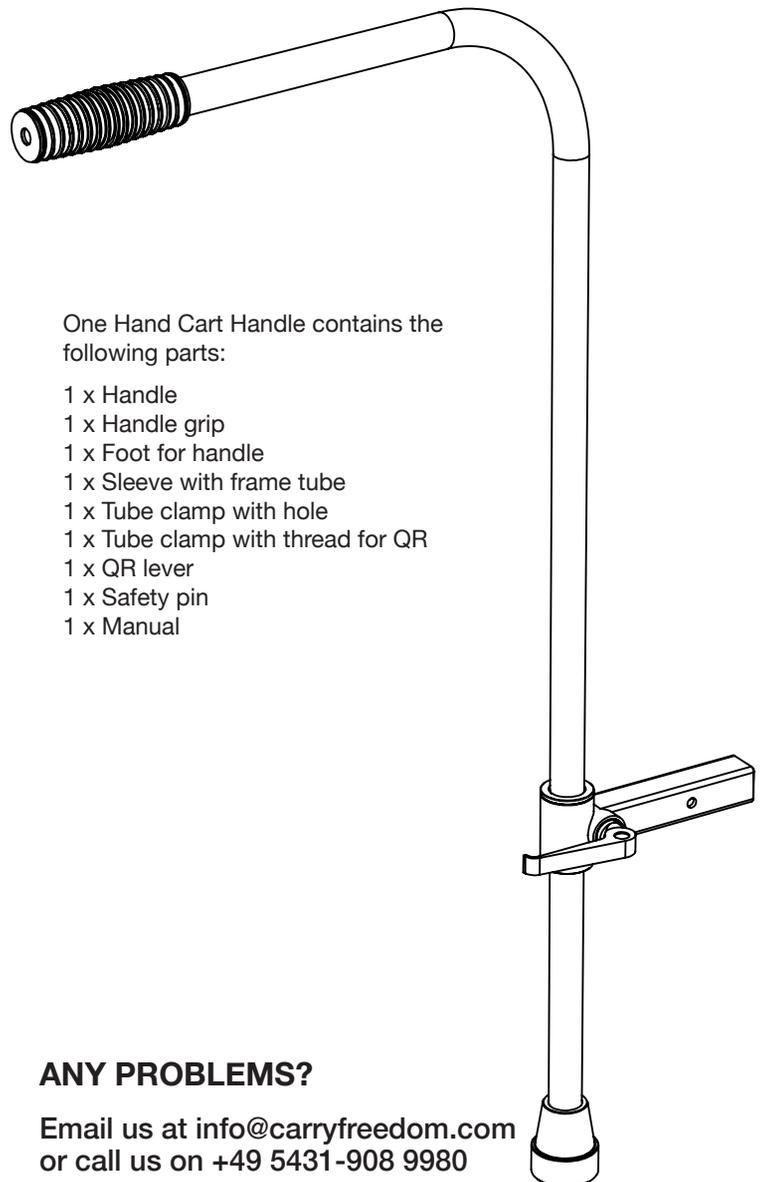

One Hand Cart Handle contains the following parts:

- 1 x Handle
- 1 x Handle grip
- 1 x Foot for handle
- 1 x Sleeve with frame tube
- 1 x Tube clamp with hole
- 1 x Tube clamp with thread for QR
- 1 x QR lever
- 1 x Safety pin
- 1 x Manual

ANY PROBLEMS?

Email us at info@carryfreedom.com or call us on +49 5431-908 9980

